



Function: The space washer is used for bigger distances between the frame and the surface. The space washer can be combined with a pressure distribution washer for a more stable installation.

Material: Polypropylene

Installation instructions: The space washer is snapped onto the bottom plate of the frame socket, use a maximum of 2 space washers. Adjust the screw length according to the number of space washers. After that, the frame socket is installed according to the instructions.



D	L	Art.no	Quantity	Pack.
20	10	441010	100	Packaging
20	10	SB441010	8	Pack

NOTE: Packs are only sold in multiples of ten.



Produkten bedömd i
SundaHus Miljödata

