


**Function:** Frame adjuster screw for balancing window frames for installing in wood, concrete, hollow block etc.

**Track type bit:** TX 40.

**Material:** Case hardened steel.

**Coating:** Zinc-plated 5 my, for indoor use.

**Installation instructions:** The frame adjuster screw is inserted into the lower underlying stud to the appropriate depth. If the surface is made of concrete, hollow block etc., pre-drill the material using a 6 mm drill. Use two screws when installing smaller windows. Use three or more screws when installing larger windows and windows with centre posts. Insert the screws and put the window in place. Tweak using a 28 mm tool if necessary. Now fix the window in place with frame sockets or frame screw.

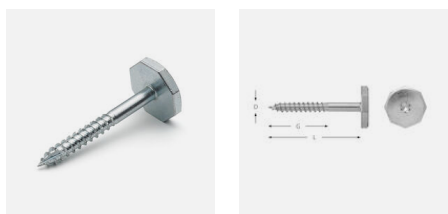

D	L	G	Art.no	E-number	Quantity	Pack.	MB
7	65	42	B447065		500	Bulk pack	
7	65	42	447065		25	Packaging	12
7	65	42	SB447065		2	Pack	10

NOTE: Packs are only sold in multiples of ten.

